



Original	Replacement
 Standby	 Power
 Equalizzatore	 Shift + Sound / Title
 Surround	 Shift + Eject / Surround
 Eject	 Eject / Surround
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Sottotitoli	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Ricerca	 Red / Netflix / Search

Original	Replacement
 Canc	 Exit / Cancel / Clear
 0/10	 0
 10+	 Guide / EPG / -/--
 Titolo	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Programm	 TV/Radio /
 Down	 Down
 Display	 Display / Media
 PAL/NTSC	 D.Menu / Top
 Setup	 Setup / OPT /
 Digest	 Shift + D.Menu / Top Menu
 Vol+	 Vol+
 Mute	 Mute / Dimmer





Original	Replacement	Original	Replacement
 Mark	 Fav / Marker / PC		
 Zoom	 Zoom / Size		
 Vol-	 Vol-		
 A-B	 Yellow / YouTube / Repeat		
 Ripeti	 Back / Return		
 Slow	 Shift + Play /		
 <</F.RWD	 << / Tune-		
 F.FWD/>>	 >> / Tune+		
 I<< / Skip-	 I<< / Preset-		
 >>I / Skip+	 >>I / Preset+		
 Stop	 Stop / Hold		
 Pause/Step	 Pause / Step / Freeze		
 Play	 Play / Slow		

Original	Replacement	Original	Replacement

