


 



 

 


Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV
 Mute	 Mute	 Info	 Info
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 FAV	 Pre Ch
 -/--	 Guide	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Shift + Dual
 Sleep	 Sleep	 CH+	 Ch +
 Audio	 Dual	 CH-	 Ch -
 Aspect	 3D	 Red	 Red





Original	Replacement
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Home	 Smart
 Setup	 Options
 Mouse	 D. Menu
 EPG	 Shift + Guide
 Text	 Text
 Stop/Reveal	 Stop
 Play/Pause / Mix	 Play
 Play/Pause / Mix	 Pause
 Index	 List
 <</Hold	 <<
 >>/Subpage	 >>
 I<< / Size	 I<<
 I<< / Size	 Format
 >>I/Cancel	 >>I

Original	Replacement
 Tv/Radio	 TV/R
 Rec	 Rec
 T-Shift	 Media
 Sub-T	 Subt

