



| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  DVD |  Shift + 2 |  Remain |  D.Menu / Top |
|  Tuner |  Shift + 6 |  0 / Video Sel. |  0 |
|  TV / Video |  TV/Radio / |  Cancel |  Shift + Exit / Cancel / Clear |
|  USB |  Shift + 8 |  I<< |  I<< / Preset- |
|  AUX |  Shift + 7 |  Step |  Shift + Pause / Step / |
|  Power |  Power |  Repeat |  Green / APP / Repeat |
|  Open / Close |  Eject / Surround |  >>I |  >>I / Preset+ |
|  Dimmer |  Shift + Mute / Dimmer |  << |  << / Tune- |
|  1 / RDS Display |  1 |  Stop |  Stop / Hold |
|  2 |  2 |  Play / Pause |  Play / Slow |
|  3 / TA |  3 |  Play / Pause |  Pause / Step / Freeze |
|  4 / PTY - |  4 |  >> |  >> / Tune+ |
|  5 / PTY Search |  5 |  Volume + |  Vol+ |
|  6 / PTY + |  6 |  Tuning + / CH + |  CH+ / Page+ |
|  7 |  7 |  Tuning + / CH + |  Shift + >> / |
|  8 / Component |  8 |  Volume - |  Vol- |
|  9 |  9 |  Mute |  Mute / Dimmer |



