

 



 





 



 

 





 











 



 



 

 



 



 

 

 

 

 





 




 

 



 
 

 

 
 

 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 <<	 << / Tune-
 Open/Close	 Eject / Surround	 >>	 >> / Tune+
 Function	 AV / Input / RDS	 Stop	 Stop / Hold
 1/RDS Display	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3/TA	 3	 Vol+	 Vol+
 4/PTY-	 4	 Mute	 Mute / Dimmer
 5/PTY Search	 5	 Tuning/CH-	 CH- / Page-
 6/PTY+	 6	 Tuning/CH+	 CH+ / Page+
 7	 7	 Vol-	 Vol-
 8	 8	 Tv Sound	 Sound / Title
 9	 9	 S/W Level	 Picture / Format
 Disc Menu	 D.Menu / Top	 Home	 Menu / Home
 0	 0	 Sleep	 Sleep / Timer
 Title Menu PopUp	 Shift + D.Menu / Top Menu	 Tools	 Setup / OPT /
 I<<	 I<< / Preset-	 Up	 Up
 >>I	 >>I / Preset+	 Info	 Info / Angle



 



 







 



 

 



 

 

 

 



 



 



 



 



 



 



 

 

 

 

 





Original		Replacement		Original		Replacement	
	Left		Left				
	Enter		OK				
	Right		Right				
	Return		Back / Return				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow/Tuner		Yellow / YouTube / Repeat				
	Blue/Mo/St		Blue / Prime Video / Random				
	Smart Hub		Smart / List				
	Search		Shift + Red / Netflix /				
	Sound Effect		Shift + Sound / Title				
	3D/Sound		Audio / Lang I/II				





Original		Replacement		Original		Replacement	
	Power		Power		Play		Play / Slow
	Function		AV / Input / RDS		Pause		Pause / Step / Freeze
	1/RDS Display		1		Vol+		Vol+
	2		2		Mute		Mute / Dimmer
	3/TA		3		Tuning/CH-		CH- / Page-
	4/PTY-		4		Tuning/CH+		CH+ / Page+
	5/PTY Search		5		Vol-		Vol-
	6/PTY+		6		Tv Sound		Sound / Title
	7		7		Home		Menu / Home
	8		8		Sleep		Sleep / Timer
	9		9		Tools		Setup / OPT /
	0		0		Up		Up
	I<<		I<< / Preset-		Info		Info / Angle
	>>I		>>I / Preset+		Left		Left
	<<		<< / Tune-		Enter		OK
	>>		>> / Tune+		Right		Right
	Stop		Stop / Hold		Return		Back / Return





Original	Replacement
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Shift + Red / Netflix /

Original	Replacement

