
 
 










Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Setup	 Setup / OPT /
 3D	 Picture / Format
 Zoom	 Zoom / Size
 Book Mark	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Mode	 Text / Goto
 Clear	 Exit / Cancel / Clear
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+
 Stop / Hold	 Stop / Hold
 Play / Slow	 Play / Slow
 Pause / Step / Freeze	 Pause / Step / Freeze
 Top Menu / D.Menu / Top	 D.Menu / Top
 Menu / Home	 Menu / Home
 Back / Return	 Back / Return
 Display / Media	 Display / Media
 Up	 Up
 Down	 Down
 Left	 Left





Original	Replacement
Right	Right
Enter	OK
Step	Shift + Pause / Step /
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle

Original	Replacement

