
















 






 







 





 







 











 



Original	Replacement
 Standby/On	 Power
 Eject	 Eject / Surround
 Index	 Info / Angle
 Rec Speed	 Setup / OPT /
 CLK/Count	 D.Menu / Top
 Picture	 Picture / Format
 Timer	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 Strobe	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 Art	 Text / Goto
 Input	 AV / Input / RDS

Original	Replacement
 7	 7
 8	 8
 9	 9
 +	 Vol+
 CH+	 CH+ / Page+
 100	 Guide / EPG / -/-
 0	 0
 CLR/RST	 Exit / Cancel / Clear
 -	 Vol-
 CH-	 CH- / Page-
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause/Still	 Pause / Step / Freeze
 Display	 Display / Media





Original	Replacement	Original	Replacement
 Monitor	 Yellow / YouTube / Repeat		
 A.Dub	 Sound / Title		
 Input System	 Red / Netflix / Search		
 Up	 Up		
 Output System	 Green / APP / Repeat		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Auto	 Smart / List		
 Down	 Down		
 Menu	 Menu / Home		
 ← Tracking	 I<< / Preset-		
 Tracking →	 >>I / Preset+		
 Slow-	 Shift + Down		
 Slow+	 Shift + Up		

