































































 







Original	Replacement	Original	Replacement
	Power		Up
	Mute		PR+
	1		PR-
	2		Down
	3		Right
	4		Vol+
	5		Left
	6		Vol-
	7		TV/TX
	8		PP
	9		16:9
	0		Red
	Guide / EPG / -/--		Green
	AV		Yellow
	Menu		Blue
	Swap		Violet
	OK		[ ] Smart Controls
	Power		Up
	Mute / Dimmer		CH+ / Page+
	1		CH- / Page-
	2		Down
	3		Right
	4		Vol+
	5		Left
	6		Vol-
	7		Text / Goto
	8		Fav / Marker / PC
	9		Setup / OPT /
	0		Red / Netflix / Search
	Guide / EPG / -/--		Green / APP / Repeat
	AV / Input / RDS		Yellow / YouTube / Repeat
	Menu / Home		Blue / Prime Video / Random
	Back / Return		Display / Media
	OK		Picture / Format



