

 
 





 


 




 


 
 



 




 


 

 





 
 
 
 



 



 


 



 
 















 









Original		Replacement		Original		Replacement	
	Power		Power		4		4
	TV/Source		AV		5		5
	Wide		Format		6		6
	TXT/TV		Text		7		7
	Info		Info		8		8
	Guide		Guide		9		9
	Subtitle		Subt		0		0
	Mute		Mute		-/--		Shift + Guide
	[Y]/[≡?]		Eject		CS		Pre Ch
	D/A/P≡P		Options		PR+		Ch +
	Red		Red		PR-		Ch -
	Green		Green		Vol+		Vol +
	Yellow		Yellow		Vol-		Vol -
	Blue		Blue		Menu		Menu
	1		1		Return		Back
	2		2		OK		Ok
	3		3		Up		Up




 
 


 




 









Original	Replacement	Original	Replacement
 Down	 Down	 Clear	 Exit
 Right	 Right	 Play List	 Shift + List
 Left	 Left	 Rec Mode	 Shift + Rec
 Time Out	 List	 Repeat	 Shift + Text
 Replay	 TV/R	 A-B	 Sleep
 Play	 Play	 Zoom	 Shift + Eject
 Stop	 Stop	 Surround	 Dual
 Rec	 Rec	 Bass	 Shift + Dual
 Pause/Step	 Pause	 →←	 Shift + Subt
 <<	 <<	 ▼A·B	 Shift + Sleep
 >>	 >>	 [≡◇]	 3D
 Power DVD	 Shift + Power	 [≡+]	 Smart
 AVD 3D	 Media	 F	 Shift + Menu
 I<<	 I<<	 DVD Up	 Shift + Up
 I>>	 I>>	 DVD Down	 Shift + Down
 HDD Menu	 Shift + D. Menu	 DVD Left	 Shift + Left
 Timer Rec	 Shift + AV	 DVD Right	 Shift + Right





Original	Replacement	Original	Replacement
 DVD I<<	 Shift + I<<		
 DVD >>I	 Shift + >>I		
 DVD Menu	 D. Menu		
 DVD <<	 Shift + <<		
 DVD >>	 Shift + >>		
 DVD Stop	 Shift + Stop		
 DVD Pause/Step	 Shift + Pause		
 DVD Play	 Shift + Play		
 DVD Enter	 Shift + Ok		

