








 

 





 













 

 

 



Original	Replacement
 POWER	 Power
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 INPUT	 AV / Input / RDS
 1--	 Guide / EPG / /--
 SPORTS	 Green / APP / Repeat
 ECO	 Smart / List
 GUIDE	 D.Menu / Top

Original	Replacement
 INFO	 Info / Angle
 VOL +	 Vol+
 VOL -	 Vol-
 RECALL	 Back / Return
 RESET	 Setup / OPT /
 CH +	 CH+ / Page+
 CH -	 CH- / Page-
 AUDIO	 Audio / Lang I/II
 CAPTION	 Subtitle / EQ
 SLEEP	 Sleep / Timer
 ^	 Up
 v	 Down
 <	 Left
 >	 Right
 OK	 OK
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear



Menu