
 



 

 































 








 







| Original   | Replacement  | Original  | Replacement  |
|--|--|---|--|
|  Open/Close |  Eject / Surround       |  8           |  8                          |
|  Mute       |  Mute / Dimmer          |  9           |  9                          |
|  DVD        |  Shift + 2              |  +10         |  Guide / EPG / -/--         |
|  Tuner      |  Shift + 6              |  0           |  0                          |
|  AUX 1      |  Red / Netflix / Search |  Time        |  Sleep / Timer              |
|  AUX 2      |  AV / Input / RDS       |  Title       |  Sound / Title              |
|  N/P        |  Exit / Cancel / Clear  |  Prog        |  Shift + TV/Radio / Program |
|  Subtitle   |  Subtitle / EQ          |  CH Set      |  Smart / List               |
|  Language   |  Audio / Lang I/II      |  Volume+     |  Vol+                       |
|  Angle      |  Info / Angle           |  Menu        |  Menu / Home                |
|  1         |  1                     |  Display    |  Display / Media           |
|  2        |  2                    |  Slow      |  Shift + Play /           |
|  3        |  3                    |  Volume -  |  Vol-                     |
|  4        |  4                    |  FM Mode   |  TV/Radio /               |
|  5        |  5                    |  Pre / Tun |  Picture / Format         |
|  6        |  6                    |  Up        |  Up                       |
|  7        |  7                    |  Left      |  Left                     |



