 
 






 



 

 

 

 
 
 

 
 
 
 
 
 
 

 

 
 


 

 






| Original   | Replacement   |
|--|---|
|  On / Stand-By      |  Power           |
|  Clear / Dimmer     |  Yellow          |
|  Memory             |  Green           |
|  Disc Select 1      |  Shift + 1       |
|  Disc Select 2      |  Shift + 2       |
|  Disc Select 3      |  Shift + 3       |
|  Disc Select 4      |  Shift + 4       |
|  Disc Select 5      |  Shift + 5       |
|  CD                 |  Smart           |
|  Tuner (Band)       |  Media           |
|  Video / AUX / USB |  Shift + Smart  |
|  CD Random        |  Red           |
|  CD Pause         |  TV/R          |
|  USB Pause        |  Shift + Pause |
|  CD Pause         |  Pause         |
|  CD Stop          |  Format        |
|  CD Stop          |  Stop          |

| Original   | Replacement  |
|--|--|
|  CD Play                  |  Sleep        |
|  CD Play                  |  Play         |
|  USB Stop                 |  Shift + Stop |
|  USB Play                 |  Shift + Play |
|  Tuning +                 |  Shift + Up   |
|  Tuning +                 |  Up           |
|  Tuning -                 |  Shift + Down |
|  Tuning -                 |  Down         |
|  >>I / >> / Preset Up     |  >>           |
|  >>I / >> / Preset Up     |  >>I          |
|  >>I / >> / Preset Up    |  Right       |
|  I<< / << / Preset Down |  <<         |
|  I<< / << / Preset Down |  I<<        |
|  I<< / << / Preset Down |  Left       |
|  Display                |  Info       |
|  Folder                 |  Ok         |
|  Clock / Timer          |  AV         |





| Original   | Replacement   |
|--|---|
|  RDS ASPM         |  Shift + 7 |
|  RDS PTY          |  Shift + 8 |
|  RDS Display      |  Shift + 9 |
|  1                |  1         |
|  2                |  2         |
|  3                |  3         |
|  4                |  4         |
|  5                |  5         |
|  6                |  6         |
|  7                |  7         |
|  8               |  8        |
|  9              |  9       |
|  0              |  0       |
|  +10            |  Guide   |
|  Equalizer Mode |  Dual    |
|  X-Bass / Demo  |  Subt    |
|  Volume -       |  Vol -   |

| Original   | Replacement   |
|--|---|
|  Volume + |  Vol + |

