 





 










 

 

 

 
 









 




 

 

 






 




 





| Original | Replacement |
|---|--|
|  |  AV / Input / RDS |
|  |  Power |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Guide / EPG / -/-- |
|  |  0 |
|  |  Back / Return |
|  |  Setup / OPT / |
|  |  Smart / List |
|  |  Fav / Marker / PC |

| Original | Replacement |
|---|---|
|  |  Info / Angle |
|  |  Vol+ |
|  |  Mute / Dimmer |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  Picture / Format |
|  |  CH- / Page- |
|  |  Audio / Lang I/II |
|  |  Sound / Title |
|  |  D.Menu / Top |
|  |  Sleep / Timer |
|  |  Up |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Menu / Home |
|  |  Down |





| Original | | Replacement | |
|---|------------|---|-----------------------------|
|  | Exit |  | Exit / Cancel / Clear |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Teletext |  | Text / Goto |
|  | Subtitle |  | Subtitle / EQ |
|  | Size |  | Zoom / Size |
|  | Subpage |  | Eject / Surround |
|  | Index |  | Display / Media |
|  | Hold |  +  | Shift + Stop / |
|  | Reveal |  | TV/Radio / |
|  | Freeze |  | Pause / Step / Freeze |
|  | I<< |  | I<< / Preset- |
|  | Stop |  | Stop / Hold |
|  | Play/Pause |  | Play / Slow |
|  | >>I |  | >>I / Preset+ |

| Original | | Replacement | |
|----------|--|-------------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

