
























































 
 
 


Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Mode	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Info	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	Pro Logic	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
NTSC/PAL	 Picture / Format	Key+	 Vol+
Zoom	 Zoom / Size	Auto/Track	 Smart / List
Timer	 Sleep / Timer	Slow Up	 CH+ / Page+



Original	Replacement	
Key-	 Vol-	
Display	 Display / Media	
Store	 CH- / Page-	
1	 1	
2	 2	
3	 3	
4	 4	
5	 5	
6	 6	
7	 7	
8	 8	
9	 9	
+10	 Guide / EPG / -/--	
0	 0	
Mark	 Fav / Marker / PC	
Search	 Red / Netflix / Search	
Erase	 Green / APP / Repeat	

Original	Replacement	
Effect	 Yellow / YouTube / Repeat	
Random	 Blue / Prime Video / Random	
Dimmer	 Shift + Mute / Dimmer	
Play/Back	 Shift + Play /	
5.1Ch	 Shift + Sound / Title	
2.1Ch	 Shift + Audio / Lang I/II	
EQ	 Shift + Subtitle / EQ	
Game	 Shift + Smart / List	
Shuffle	 Shift + Blue / Prime	

