








 



 



 



 



 



 


 




 












 




 

 











 




Original	Replacement	Original	Replacement
 Power	 Power	 Bumper	 P/C / FAV
 Image Mode	 V-FOR	 Input Source	 SRC
 Sound Mode	 Audio	 Up	 UP
 Display Mode	 WIDE	 Down	 DOWN
 1	 1	 Right	 RIGHT
 2	 2	 Left	 LEFT
 3	 3	 OK	 OK
 4	 4	 Back	 BACK
 5	 5	 Menu	 MENU
 6	 6	 CH+	 CH +
 7	 7	 CH-	 CH -
 8	 8	 Mute	 MUTE
 9	 9	 Vol+	 VOL +
 0	 0	 Vol-	 VOL -
 Alternately	 -/-- / EPG	 Red	 Red (A)
 Screen Display	 INFO	 Green	 Green (B)
 Home	 VOD	 Yellow	 Yellow (C)





Original		Replacement		Original		Replacement	
	Blue		Blue (D)				

