 

 

 









 

 

 

 

 

 

 

 

 
 
 

 
 


 





 











 







 







Original	Replacement	Original	Replacement
 Input	 AV / Input / RDS	 Left	 Left
 Sync Menu	 D.Menu / Top	 OK	 OK
 Power	 Power	 Right	 Right
 <<	 << / Tune-	 Return	 Back / Return
 Play	 Play / Slow	 Down	 Down
 Pause	 Pause / Step / Freeze	 Options	 Setup / OPT /
 >>	 >> / Tune+	 Home	 Menu / Home
 I<<	 I<< / Preset-	 Red	 Red / Netflix / Search
 Stop	 Stop / Hold	 Green	 Green / APP / Repeat
 >>I	 >>I / Preset+	 Yellow	 Yellow / YouTube / Repeat
 Digital/Analog	 Display / Media	 Blue	 Blue / Prime Video / Random
 [+]	 Zoom / Size	 1	 1
 Scene	 Smart / List	 2	 2
 Audio	 Audio / Lang I/II	 3	 3
 Guide	 Guide / EPG / -/--	 4	 4
 [i+]/[?]	 Info / Angle	 5	 5
 Up	 Up	 6	 6





	Original	Replacement	Original	Replacement
	7			
	8			
	9			
	[≡]/Text			
	0			
	[...]			
	Vol+			
	CH+			
	Vol-			
	CH-			
	Mute			
	Back/Recall			

