




 
 


 
 



 
 
 



 
 


 
 
 
 

 

 










Original	Replacement	Original	Replacement
 Power	 Power	 Time/Text	 Text
 1	 1	 Timer	 Shift + AV
 2	 2	 Tv/Video	 TV/R
 3	 3	 [...]	 Subt
 4	 4	 O)))	 Dual
 5	 5	 Clear	 Guide
 6	 6	 System Menu	 Menu
 7	 7	 Title List	 List
 8	 8	 Timer List	 Format
 9	 9	 Menu	 D. Menu
 0	 0	 Top Menu	 Shift + Menu
 PR+	 Ch +	 Eject	 Eject
 PR-	 Ch -	 Return	 Back
 Vol+	 Vol +	 Tools	 Options
 Vol-	 Vol -	 Enter	 Ok
 Input Select	 AV	 Up	 Up
 Display	 Info	 Down	 Down





Original	Replacement	Original	Replacement
	 Right		 Shift + Rec
	 Left		 3D
	 Play		 Red
	 Stop		 Shift + Eject
	 Pause		 Exit
	 >> >		 Green
	 << <		 Yellow
	 >>		 Shift + Power
	 I<<		 Smart
	 Shift + Right		 Media
	 Shift + Left		 Shift + 1
	 Blue		 Shift + 2
	 Pre Ch		 Shift + 3
	 Sleep		 Shift + 4
	 Rec		 Shift + 5
	 Shift + Pause		 Shift + 6
	 Shift + Stop		 Shift + 7





Original	Replacement
8 Tv	+ Shift + 8
9 Tv	+ Shift + 9
0 Tv	+ Shift + 0
-/--/Clear Tv	+ Shift + Guide
Prog + Tv	+ Shift + Ch +
Prog - Tv	+ Shift + Ch -
Tv/Video Tv	+ Shift + TV/R

Original	Replacement

