 







 
 
 
 

 
 


 

 
 
 

 
 
 
 


 








Original	Replacement
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Eject	 Eject
 Sleep	 Sleep
 Display	 Shift + Info
 Function	 Options
 Tone	 3D
 Night	 Shift + Sleep
 Dimmer	 Shift + Mute
 Repeat	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 D.Tuning	 Media
 Angle	 Format
 DVD Top Menu	 Shift + Menu
 DVD Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right





Original	Replacement
Power	Power
[i+]	Info
Analog	Media
Digital	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Text	Text
-/--	Shift + Guide
Guide	Guide

Original	Replacement
Source	AV
Tools / Options	Options
Home / Menu	Menu
Muting	Mute
Volume+	Vol +
Volume-	Vol -
Prog+	Ch +
Prog-	Ch -

