

 
 
 

 
 
 
 
 
 
 
 

 



 

 
 


 



 





 







 



 

 

 



 


 
 








 

 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	[≡]		Text
	You Tube		Shift + Media
	Netflix		Shift + Smart
	prime video		Media
	Disney+		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Source		AV
	Micro		3D
	Rec List		Options
	*		Menu
	Back		Back
	TV		TV/R
	Home		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





	Original	Replacement	Original	Replacement
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	CH+	 Ch +		
	Recall	 Pre Ch		
	CH-	 Ch -		
	Audio	 Dual		
	[...]	 Subt		
	Help	 Format		
	<<	 <<		
	Play	 Play		
	>>	 >>		
	Rec	 Rec		
	Pause	 Pause		
	Exit	 Exit		

