

 













 















 





 








 













 




 






Original	Replacement
 Standby	 Power
 Standby Tv	 Shift + Power
 Picture Navi	 Picture / Format
 Input Tv	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Time/text	 Text / Goto

Original	Replacement
 Clear	 Exit / Cancel / Clear
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Return	 Back / Return
 Display	 Display / Media
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 I<<	 I<< / Preset-
 ←/<	 CH- / Page-
 →/ >	 CH+ / Page+
 >>	 >> / Preset+
 <</<	 << / Tune-





Original		Replacement		Original		Replacement	
	Play		Play / Slow				
	>>/ >		>> / Tune+				
	Fast/Slow Play		Setup / OPT /				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				

