

 

 






	Original	Replacement
	Eject	 Eject / Surround
	Power Tv	 +  Shift + Power
	Power	 Power
	1	 1
	2	 2
	3	 3
	Vol+	 Vol+
	4	 4
	5	 5
	6	 6
	Vol-	 Vol-
	7	 7
	8	 8
	9	 9
	Tv/Video	 TV/Radio /
	Clear	 Exit / Cancel / Clear
	0	 0

	Original	Replacement
	Enter	 AV / Input / RDS
	Picture Mode	 Picture / Format
	Audio	 Audio / Lang I/II
	Subtitle	 Subtitle / EQ
	Angle	 Info / Angle
	Sur	 +  Shift + Eject / Surround
	I<</Prev	 I<< / Preset-
	>>I/Next	 >>I / Preset+
	Repeat	 Green / APP / Repeat
	Time/Text	 Text / Goto
	<< Scan/Slow	 << / Tune-
	Scan/Slow >>	 >> / Tune+
	Search Mode	 Red / Netflix / Search
	Replay	 Zoom / Size
	Play	 Play / Slow
	Pause	 Pause / Step / Freeze
	Stop	 Stop / Hold





Original	Replacement	Original	Replacement
			
Up	Up		
			
Left	Left		
			
Enter	OK		
			
Right	Right		
			
Down	Down		
			
Display	Display / Media		
			
Return	Back / Return		
			
Top Menu	D.Menu / Top		
			
Menu	Menu / Home		

