



Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 Mute	 Mute	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 FAV	 Pre Ch
 0	 0	 SUBT	 Subt
 i	 Info	 EPG	 Guide
 Recall	 Back	 List	 List
 Vol+	 Vol +	 [≡]/Text	 Text
 Vol-	 Vol -	 [≡+]/Hold	 Options
 Nicam	 Smart	 [▼]/PgDn	 Shift + Ch -





Original	Replacement
 [▲]/Pg Up	 Shift + Ch +
 [≡i]/Index	 Shift + Info
 [≡◆]/Size	 Format
 [≡?]/Reveal	 3D
 [≡o]/Subpage	 Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Cyan	 Blue
 Sleep	 Sleep
 Tv/Radio	 TV/R
 Audio	 Dual
 P.Mode	 Shift + Format

Original	Replacement

