 




Original	Replacement	Original	Replacement
 Power	 Power		 Guide
 Source	 AV		 Pre Ch
 Mute	 Mute	 Red	 Red
 Auto	 Smart	 Green	 Green
 Display	 Info	 Yellow	 Yellow
 Sleep	 Sleep	 Blue	 Blue
 TV	 Media		 Up
 1	 1		 Left
 2	 2	 Menu	 Menu
 3	 3	 Menu	 Ok
 4	 4		 Right
 5	 5		 Down
 6	 6		 Ch +
 7	 7		 Ch -
 8	 8		 Vol +
 9	 9		 Vol -
 0	 0		

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 TV	 TV
 SOURCE	 SOURCE	 DVD	 DVD
 MUTE	 MUTE	 SAT	 SAT
 AUTO	 AUTO	 AUX	 AUX
 DISPLAY	 DISPLAY	 PLAY MODE	 PLAY MODE
 SLEEP	 SLEEP	 II	 II
 TV	 TV	 ■	 ■
 1	 1	 ⏩	 ⏩
 2	 2	 ⏮	 ⏮
 3	 3	 ▶	 ▶
 4	 4	 ⏪	 ⏪
 5	 5	 LIST	 LIST
 6	 6	 SOUND	 SOUND
 7	 7	 DUAL	 DUAL
 8	 8	 SUBT	 SUBT
 9	 9	 AD	 AD
 0	 0	 SETTINGS	 SETTINGS
		 OPT	 OPT
		 ECO	 ECO
		 3D	 3D
		 TIMER	 TIMER
		 AV	 AV
		 D.MENU	 D.MENU
		 REPEAT	 REPEAT
		 ZOOM	 ZOOM
		 TEXT	 TEXT
		 TOP MENU	 TOP MENU
		 INFO	 INFO
		 MENU	 MENU
		 EXIT	 EXIT
		 RETURN	 RETURN
		 BACK	 BACK
		 HOME	 HOME
		 SMART	 SMART
		 APP	 APP
		 MEDIA	 MEDIA
		 + VOL	 + VOL
		 + CH	 + CH
		 - VOL	 - VOL
		 - CH	 - CH
		 1	 1
		 2	 2
		 3	 3
		 4	 4
		 5	 5
		 6	 6
		 7	 7
		 8	 8
		 9	 9
		 GUIDE	 GUIDE
		 0	 0
		 PRE-CH	 PRE-CH
		 A	 A
		 B	 B
		 C	 C
		 D	 D

