 






 
 
 








 

 

 

 

 





 

 


 


 

 


 
 
 

 



 


 



 











Original	Replacement	Original	Replacement
 Power	 Power	 Exit/title	 Exit
 Source	 AV	 EPG/D.Menu	 Dual
 1	 1	 OK	 Ok
 2	 2	 Left	 Left
 4	 4	 Right	 Right
 5	 5	 Up	 Up
 7	 7	 Down	 Down
 3	 3	 Red/Goto	 Red
 6	 6	 Green/Angle	 Green
 8	 8	 Yellow/Repeat	 Yellow
 9	 9	 Blue/A-B	 Blue
 0	 0	 Mute	 Mute
 -/--	 -/-- Guide	 Display	 Shift + Info
 Back	 Back	 Vol+	 Vol +
 Media	 Media	 Vol-	 Vol -
 Menu	 Menu	 CH+	 Ch +
 Open TV/Radio	 TV/R	 CH-	 Ch -





Original	Replacement	Original	Replacement
 <</Text	 <<		
 Text	 Text		
 Play/Pause	 Play		
 >>/Subpage	 >>		
 I<</FAV	 +  Shift + Left		
 Stop	 Stop		
 >>I/Index	 +  Shift + Right		
 Sleep	 Sleep		
 Rec/D.Setup	 Rec		
 Hold/Freeze	 Info		
 Lang/Audio	 Pre Ch		
 Aspect	 Format		
 Subtitle	 Subt		
 S-Mode	 Options		
 Size/Zoom	 D. Menu		
 P-Mode	 Eject		

