




 


 
 

 

 





 










 
 



 

 
 
 











 



 

 

 

 










Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Subtl	 Subt	 Mute	 Mute
 Sleep	 Sleep	 Text	 Text
 USB	 Media	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Info	 Info
 3	 3	 Entrada	 AV
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Menu	 Menu
 0	 0	 Salir	 Exit
 DTV/Radio	 TV/R	 Imagen	 Format
 Recall	 Pre Ch	 Sonido	 Shift + Dual





	Original	Replacement	Original	Replacement
	Tamaño	 3D		
	Guía	 GUIDE		
	Play	 PLAY MODE		
	Pause/TS	 II		
	Detener			
	Grabar	 REC MODE		
	List	 LIST		
	Red	 A		
	I<<			
	Green	 B		
	>>I			
	Yellow	 C		
	<<			
	Blue	 D		
	>>			

