

 

 

 



 

 

 

 

 



 

 

 







 

 

 



 



 

 

 



 

 







 







Original		Replacement		Original		Replacement	
	Power		Power		1		1
	Mute		Mute / Dimmer		2		2
	PG+		CH+ / Page+		3		3
	DTV/VCR		Smart / List		Epg		Guide / EPG / -/--
	Vol+		Vol+		4		4
	PG-		CH- / Page-		5		5
	Info		Info / Angle		6		6
	Vol-		Vol-		Recall		Back / Return
	Menu		Menu / Home		7		7
	Up/Ch+		Up		8		8
	Exit		Exit / Cancel / Clear		9		9
	Left		Left		0		0
	Ok		OK		Audio		Audio / Lang I/II
	Right		Right		Tv/Radio		TV/Radio /
	Record		Rec / Rec Mode		Fav		Fav / Marker / PC
	Down/Ch-		Down		File		Display / Media
	Times Shift		Sleep / Timer		Text		Text / Goto





Original	Replacement	Original	Replacement
 Subtitle	 Subtitle / EQ		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Red	 Red / Netflix / Search		
 Stop	 Stop / Hold		
 Green	 Green / APP / Repeat		
 Step	 Shift + Pause / Step / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Pause	 Pause / Step / Freeze		
 Blue	 Blue / Prime Video / Random		
 Play	 Play / Slow		

Original	Replacement

