
 



 









 



 




 



 
 

 
 
 
 
 

 

 
 








Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Mute	 Mute	 5	 5
 Display	 Shift + Info	 6	 6
 Auto	 Smart	 7	 7
 Pic. Size	 Eject	 8	 8
 P.Mode	 Format	 9	 9
 S.Mode	 Shift + Dual	 0	 0
 Still	 Pause	 -/--	 Shift + Guide
 DVB Source	 Media	 Return	 Back
 Info	 Info	 System	 Options
 FAV	 Pre Ch	 Nicam / A2	 List
 EPG	 Guide	 Fav-	 I<<
 Audio	 Dual	 Fav+	 >>I
 Subtitle	 Subt	 Menu	 Menu
 1	 1	 Exit	 Exit
 2	 2	 Up / CH+	 Up
 3	 3	 Up / CH+	 Ch +





Original		Replacement		Original		Replacement	
	Down / CH-		Down		Red		Red
	Down / CH-		Ch -		Green		Green
	Right / Vol+		Right		Yellow		Yellow
	Right / Vol+		Vol +		Cyan		Blue
	Left / Vol-		Left				
	Left / Vol-		Vol -				
	Enter		Ok				
	TV / AV		AV				
	Sleep		Sleep				
	Text		Text				
	Hold		Stop				
	Index		Shift + Smart				
	Cancel		Shift + Exit				
	Mix		Shift + Text				
	Size		Shift + Eject				
	Sub Page		Shift + Subt				
	Reveal		Shift + Media				

