 


Original	Replacement
Power AMP	Power
Power Audio	Shift + Power
1	1
2	2
3	3
Disc	Eject / Surround
4	4
5	5
6	6
>=10	Guide / EPG / -/--
7	7
8	8
9	9
0	0
Up	Up
Menu	Menu / Home
Left	Left



Original	Replacement
Select	OK
Right	Right
Down	Down
Display	Display / Media
Band	Smart / List
CH-	CH- / Page-
CH+	CH+ / Page+
Tape 1	Shift + 5
Tape 2	Shift + 4
CD	Shift + 3
Tuner	Shift + 6
MD	Shift + 8
DVD	Shift + 2
Aux	Shift + 7
Phono	Shift + 1
Muting	Mute / Dimmer
Volume-	Vol-



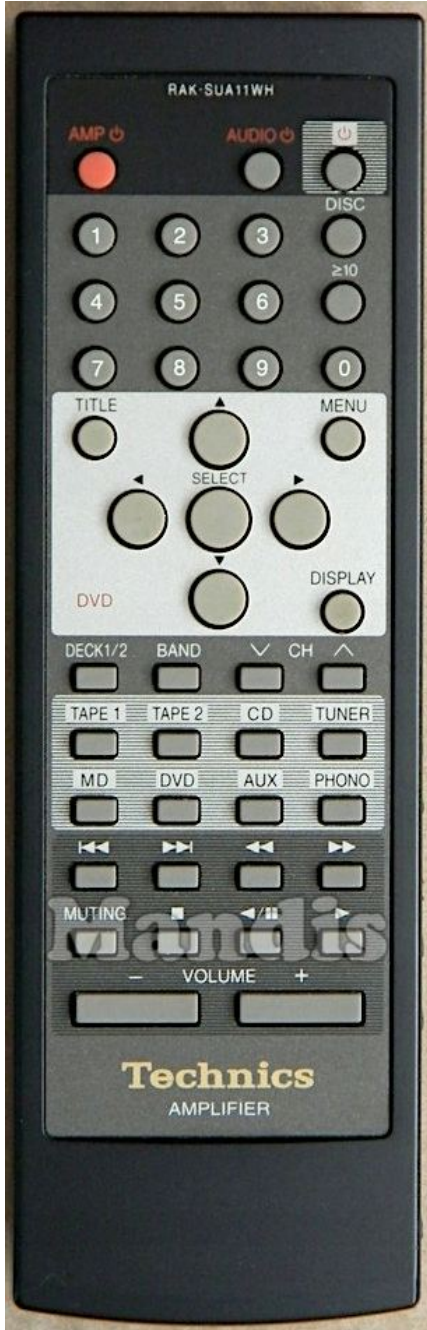

Original


Replacement

	Volume+		Vol+

Original

 Replacement




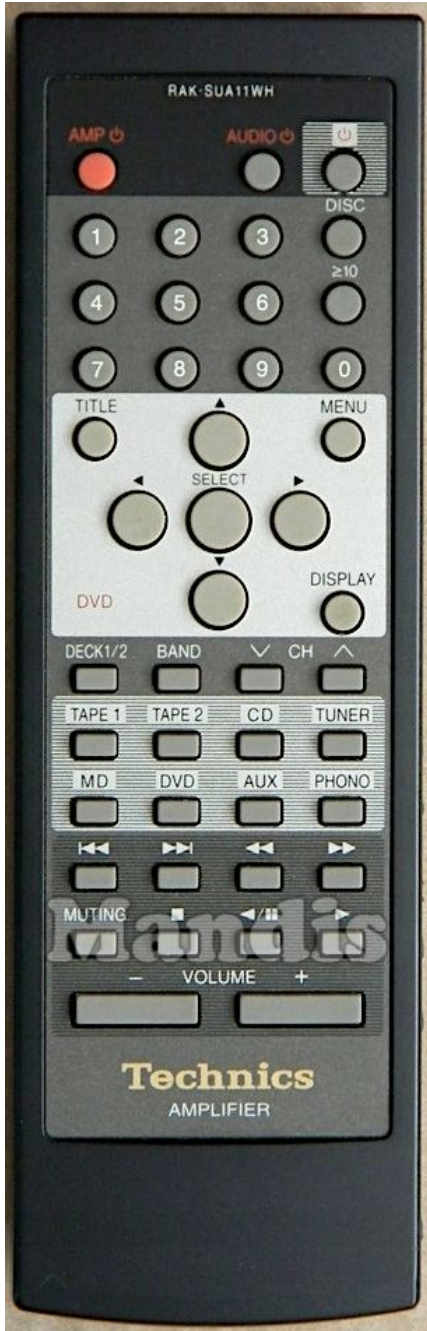

Original	Replacement
 Power DVD	 Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 >10	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Select	 OK

Original	Replacement
 Right	 Right
 Down	 Down
 Display	 Display / Media
 Band	 Smart / List
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Tape	 Shift + 5
 CD	 Shift + 3
 DVD	 Shift + 2
 I<</<<	 I<< / Preset-
 >>/>>I	 >>I / Preset+
 Muting	 Mute / Dimmer
 Stop	 Stop / Hold
 Play	 Play / Slow
 Volume-	 Vol-
 Volume+	 Vol+



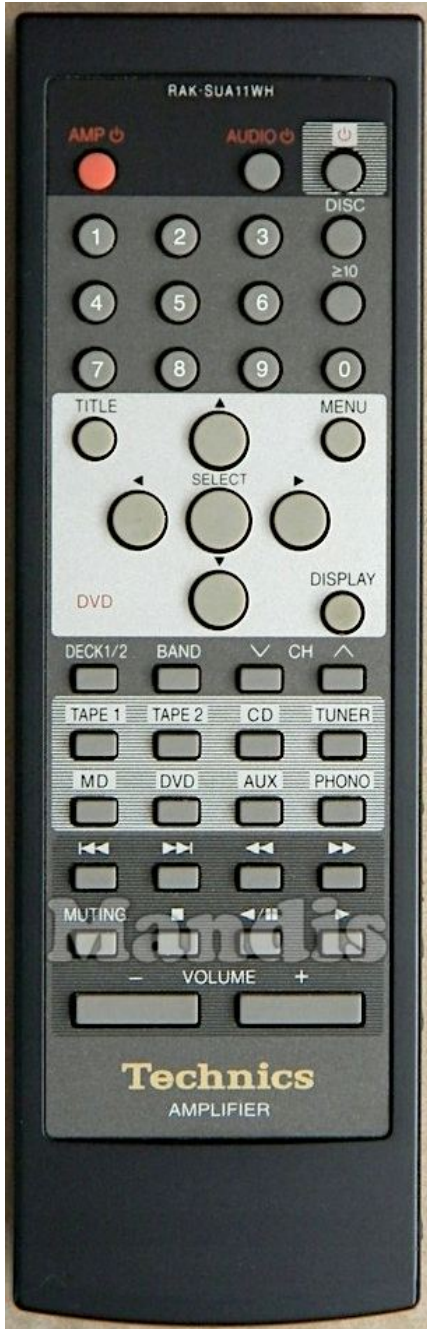 

Original	Replacement
 Power CD	 Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 >=10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 CD	 Shift + 3
 TUNER	 Shift + 6
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 Muting	 Mute / Dimmer
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Volume-	 Vol-
 Volume+	 Vol+

