





 

 

 

 








 


 
 

 
 






 


Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Replacement
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-






Original	Replacement	Original	Replacement
 MENU	Menu	 HOME MENU	Menu / Home
 Vol -	Vol -	 VOL -	Vol-
 TV/SAT	TV/SAT	 LIST SMART	Smart / List
 TXT	TXT	 GOTO TEXT	Text / Goto
 STOP	Stop	 STEP-FREEZE	Pause / Step / Freeze
 EXT	EXT	 MEDIA DISPLAY	Display / Media
 SAT1	SAT1 + OK		Shift + 2
 SAT2	SAT2 + OK		Shift + 3
 TV	TV + OK		Shift + 1
	PIP	 FORMAT PICTURE	Picture / Format

Original	Replacement	Original	Replacement





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓ -/--	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 <<< / Tune-
 Red / <<<	 Red / Netflix / Search
 Green / Stop	 Green / APP / Repeat

Original	Replacement
 Green / Stop	 Stop / Hold
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original	Replacement	Original	Replacement
Prog -	CH- / Page-		
Menu	Menu / Home		
Vol -	Vol-		
TV/SAT	Smart / List		
TXT	Text / Goto		
Stop	Pause / Step / Freeze		
EXT	Display / Media		
SAT1 + OK	+ 2		
SAT2 + OK	+ 3		
TV + OK	+ 1		





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-
 Green / Stop	 Stop / Hold

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>	 >> / Tune+
 Blue / >>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original		Replacement	
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol -		Vol-
	TV/SAT		Smart / List
	TXT		Text / Goto
	Stop		Pause / Step / Freeze
	EXT		Display / Media
	SAT1 + OK		Shift + 2
	SAT2 + OK		Shift + 3
	TV + OK		Shift + 1

Original		Replacement	

