





 

 

 

 








 


 
 

 
 









Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Replacement
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-










 

 
 









 
 
 


 



Original	Replacement
 Menu	 Menu / Home
 Vol -	 Vol-
 TV/SAT	 Smart / List
 TXT	 Text / Goto
 Stop	 Pause / Step / Freeze
 EXT	 Display / Media
 SAT1 + OK	 Shift + 2
 SAT2 + OK	 Shift + 3
 TV + OK	 Shift + 1
 PIP	 Picture / Format

Original	Replacement







Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 <<< / Tune-
 Red / <<<	 Red / Netflix / Search
 Green / Stop	 Green / APP / Repeat

Original	Replacement
 Green / Stop	 Stop / Hold
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original	Replacement
PRCG Prog -	CH PAGE CH- / Page-
MENU Menu	HOME MENU Menu / Home
Vol -	VOL - Vol-
TV/SAT	LIST SMART Smart / List
TXT	GOTO TEXT Text / Goto
STOP	STEP - FREEZE Pause / Step / Freeze
EXT	MEDIA DISPLAY Display / Media
SAT1 + OK	SHIFT + DVD 2 Shift + 2
SAT2 + OK	SHIFT + CD - STB 3 Shift + 3
TV + OK	SHIFT + TV 1 Shift + 1

Original	Replacement







Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Stop / Hold

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original	Replacement
Prog -	CH- / Page-
Menu	Menu / Home
Vol -	Vol-
TV/SAT	Smart / List
TXT	Text / Goto
Stop	Pause / Step / Freeze
EXT	Display / Media
SAT1 + OK	Shift + 2
SAT2 + OK	Shift + 3
TV + OK	Shift + 1

Original	Replacement

