















Original		Replacement		Original		Replacement	
	Power		Power		Mute		Mute / Dimmer
	TV/R		TV/Radio /		CH+		CH+ / Page+
	Quick Menu		D.Menu / Top		CH-		CH- / Page-
	1		1		Menu		Menu / Home
	2		2		Exit		Exit / Cancel / Clear
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		OK
	8		8		Red		Red / Netflix / Search
	9		9		Green		Green / APP / Repeat
	0		0		Yellow		Yellow / YouTube / Repeat
	i		Info / Angle		Blue		Blue / Prime Video / Random
	Guide		Guide / EPG / -/--		TXT		Text / Goto
	Vol+		Vol+		Stop		Stop / Hold
	Vol-		Vol-		Play		Play / Slow





Original	Replacement
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+

Original	Replacement

