



 


 
 




 


 
 


 
 
 



 










 




 


 



Original	Replacement
 Power	 Power
 VCR	 Smart
 DVD	 Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue/Title	 Blue
 Violet/Camera	 3D
 :))	 Dual
 [...]	 Subt
 Info	 Info
 Return/Exit	 Back
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

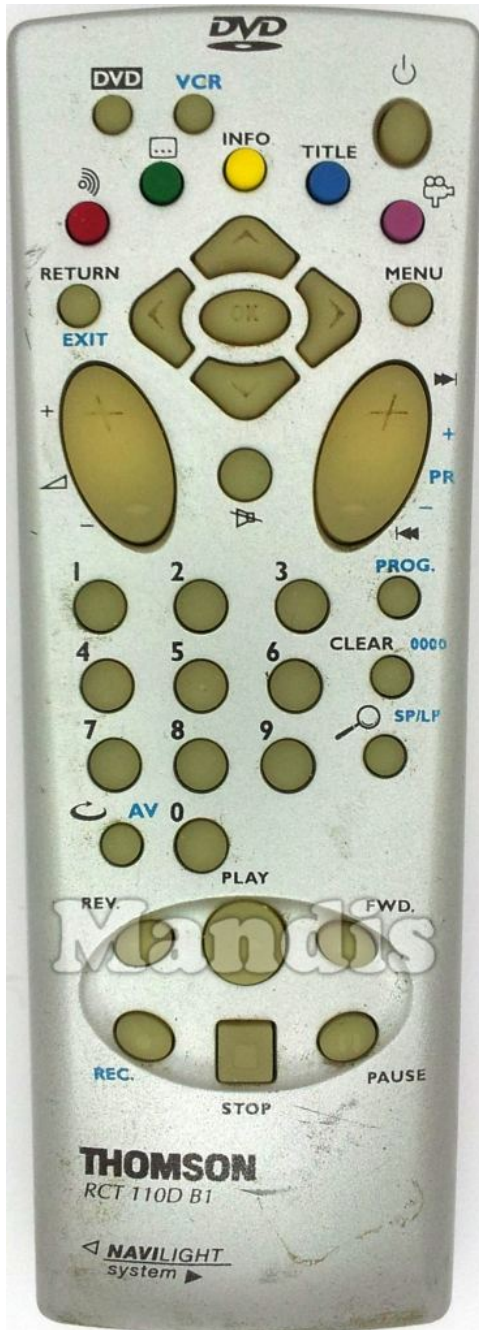Original	Replacement
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall/AV	 Pre Ch





	Original	Replacement		Original	Replacement
	Prog	 Sleep			
	Clear/0000	 Exit			
	Search/SP/LP	 TV/R			
	Rev.	 <<			
	Play	 Play			
	Fwd	 >>			
	Rec	 Rec			
	Stop	 Stop			
	Pause	 Pause			
	>>	 >>			
	<<	  <<			

