 

 

 
 

 
 
 
 
 
 

 

 
 
 
 
 

 
 
 


 

 


 

 
 

 

 
 

 


 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 ATV/DTV/Content Menu	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -

Original	Replacement
 Mute	 Mute
 Guide/Top	 Media
 Exit/Return	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu/DVD	 Menu
 Tv/FAV/Radio/Set	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [<>]	 Format
 ←[/]→	 3D
 Subtitle	 Subt

 






 


 

 

 
 
 

 

 
 
 


 

 


 
 
 

 

 

 
 
 



 



 
 






 

 

 

 
 
 

 





	Original	Replacement		Original	Replacement
	Text	 Text			
	II/II>/[▼]	 Pause			
	[i+]/[≡i]	 Info			
	O)I/II	 Dual			
	Stop	 Stop			
	Play/[≡o]	 Play			
	Eject	 Eject			
	I<</[≡?]	 I<<			
	<</[≡+]	 <<			
	>>/[≡◇]	 >>			
	>>I/[O]/[≡X]	 >>I			
	AD	 +  Shift + Subt			
	Audio	 +  Shift + Dual			

 
 

 




 




Original		Replacement		Original		Replacement	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O) /II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		/ >/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject





 
 
 
 





 
 

 



 



 

 

 

 







 

 

 
 

Original	Replacement
 I<</[≡?]	 I<<
 <</[≡+]	 <<
 >>/[≡◆]	 >>
 >>I/[O]/[≡X]	 >>I
 Audio	 +  Shift + Dual

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	←[/]→		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Original	Replacement	Original	Replacement
	P-		Ch -
	Mute		Mute
	Guide/Top		Guide
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	[<>]		Format





Original	Replacement	Original	Replacement
 [i+]/[≡i]	 Info		
 II/II>/[▼]	 Pause		
 Subtitle	 Subt		
 O)/II	 Dual		
 Play/[≡o]	 Play		
 Stop	 Stop		
 Eject	 Eject		
 I<</[≡?]	 I<<		
 <</[≡+]	 <<		
 >>/[≡◇]	 >>		
 >>I/[O]/[≡X]	 >>I		
 Audio	 Shift + Dual		
 AD	 Shift + Subt		

Original	Replacement	Original	Replacement

