













































Original	Replacement
	 Mute / Dimmer
	 Picture / Format
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 AV / Input / RDS
	 0
	 Back / Return
	 D.Menu / Top
	 Fav / Marker / PC

Original	Replacement
	 TV/Radio /
	 Menu / Home
	 Text / Goto
	 Up
	 Left
	 OK
	 Right
	 Down
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Info / Angle





Original		Replacement	
	[?]	 SMART	Smart / List
	[+]	 ZOOM	Zoom / Size
	[◆]	 MEDIA DISPLAY	Display / Media
	[≡x]	 SURROUND	Eject / Surround
	[≡≡]	 GUIDE EPG	Guide / EPG / --
	[]	 EQ SUBTITLE	Subtitle / EQ
	♪	 TITLE SOUND	Sound / Title

Original		Replacement	

