
 




 

 



 

 













 









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red / Open/Close	 Red / Netflix / Search
 Red / Open/Close	 Eject / Surround
 Green / Title	 Green / APP / Repeat
 Green / Title	 Sound / Title
 Yellow / DVD	 Yellow / YouTube / Repeat
 Yellow / DVD	 Setup / OPT /
 Blue / A-B	 Blue / Prime Video / Random
 Blue / A-B	 Shift + Yellow / YouTube / YouTube /
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Angle	 Shift + Info / Angle
 Back / Text	 Back / Return
 Back / Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Display	 Display / Media
 Menu / Info	 Info / Angle
 Menu	 Menu / Home
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/-
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 FAV	 Fav / Marker / PC





Original		Replacement		Original		Replacement	
	CH +		CH+ / Page+		Recall / GOTO		Shift + Text /
	Vol -		Vol-				
	Rec / REP		Rec / Rec Mode				
	Rec / REP		Shift + Green / APP /				
	CH -		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Audio		Audio / Lang I/II				
	0		0				
	Recall / GOTO		Smart / List				

