













 





 











 

























 







 





Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Tv/Fav/Radio		TV/Radio /
	Power		Power		Up		Up
	1		1		Exit		Exit / Cancel / Clear
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		P +		CH+ / Page+
	7		7		P -		CH- / Page-
	8		8		Vol-		Vol-
	9		9		Vol+		Vol+
	Recall		Back / Return		Aspect		Picture / Format
	0		0		→  [ / ]  ←		Zoom / Size
	Source		AV / Input / RDS		Index / [i+]		Info / Angle
	Menu		Menu / Home		Text / Mix		Text / Goto
	Guide		Guide / EPG / -/--		[▼]		Smart / List
	Tv/Fav/Radio		Fav / Marker / PC		Dual I/II		Audio / Lang I/II



