











 



 















 



 



 


 










 

 

 

 

 

 







 

 











 

 







 


 

 
 



 




 



Original	Replacement	Original	Replacement
 Power	 Power	 Progressive	 TV/Radio /
 Dimmer	 Mute / Dimmer	 DVD Menu	 D.Menu / Top
 Play	 Play / Slow	 Rec Menu	 Setup / OPT /
 Pause	 Pause / Step / Freeze	 CHP Divide	 Text / Goto
 Stop	 Stop / Hold	 Input Select	 AV / Input / RDS
 Rec	 Rec / Rec Mode	 Content Menu	 Menu / Home
 << Picture	 << / Tune-	 Up	 Up
 Picture Search	 >> / Tune+	 DVD Angle	 Info / Angle
 I<< Skip	 I<< / Preset-	 Left	 Left
 Skip >>I	 >>I / Preset+	 Enter	 OK
 FL Select	 Sound / Title	 Right	 Right
 DVD Audio	 Audio / Lang I/II	 Clear	 Exit / Cancel / Clear
 DVD Subtitle	 Subtitle / EQ	 Down	 Down
 Open / Close	 Eject / Surround	 DVD Return	 Back / Return
 P in P	 Picture / Format	 Instant Skip	 Vol+
 Zoom	 Zoom / Size	 Easy Navi	 Smart / List
 Timesleep	 Sleep / Timer	 Channel+	 CH+ / Page+





Original	Replacement
 Instant Replay	 Vol-
 Library	 Display / Media
 Channel-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Remain	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Rec Mode	 Shift + Rec / Rec Mode
 <I Slow	 Shift + << /
 Slow I>	 Shift + >> /
 II< Frame/Adjust	 Shift + I<< / Preset-
 Frame/Adjust >II	 Shift + >>I / Preset+
 Time Bar	 Shift + Sleep / Timer
 Top Menu	 Shift + D.Menu / Top Menu
 Setup	 Shift + Setup / OPT / Tools
 Edit Menu	 Shift + Menu /
 Delete	 Shift + Exit / Cancel / Clear
 Display	 Shift + Display / Media
 DVD	 Shift + 2
 HDD	 Shift + 7
 T.Search	 Shift + Red / Netflix /

