




 

 
 
 
 
 

 

 





 
 

 















Original	Replacement	Original	Replacement
	TIMER AV		0
	Power		Recall
	TV		Vol+
	TV/R		[i+]
	PROG SLEEP		P+
	PICTURE FORMAT		Vol-
	SOUND DUAL		Mute
	AD SUBT		Ch-
	1		Quick
	2		Smart
	3		Shift + Options
	4		Options
	5		Text
	6		List
	7		Menu
	8		Shift + Up
	9		Guide
	SHIFT + AD SUBT		Up





Original	Replacement	Original	Replacement
 <<	 +  Shift + Left	 Green	 Green
 Left	 Left	 Yellow	 Yellow
 OK	 Ok	 Blue	 Blue
 Right	 Right		
 >>	 +  Shift + Right		
 Back	 Back		
 Down	 Down		
 Exit	 Exit		
 ↓↓	 +  Shift + Down		
 <</[≡+]	 <<		
 Play	 Play		
 >>/[≡◇]	 >>		
 <</[≡?]	 I<<		
 Stop	 Stop		
 Pause/Step	 Pause		
 >> /[O]/[≡x]	 >>		
 Red	 Red		

