


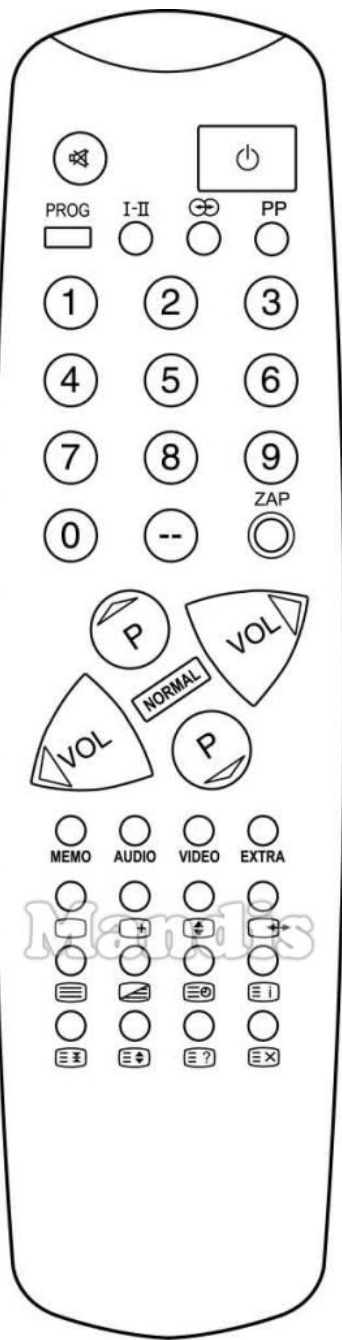

 







Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O to O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[]		Display / Media
	--		Guide / EPG / --		[+]		Stop / Hold





	Original	Replacement	Original	Replacement
	[◆]	 Setup / OPT /		
	[]↔	 D.Menu / Top		
	[≡]	 Text / Goto		
	[/≡]	 +  Shift + Text /		
	[≡○]	 Subtitle / EQ		
	[≡]	 Info / Angle		
	[≡□]	 Pause / Step / Freeze		
	[≡◆]	 Zoom / Size		
	[≡?]	 AV / Input / RDS		
	[≡X]	 Exit / Cancel / Clear		

