




 




 




	Original	Replacement		Original	Replacement
	Power		Power		Aspect
	Auto		Smart		Nicam
	Mute		Mute		Display
	1		1		CH +
	2		2		CH -
	3		3		Up
	4		4		Right
	5		5		Down
	6		6		Left
	7		7		Enter
	8		8		Menu
	9		9		Exit
	0		0		Input
	-/--		Guide		P.Mode
	Recall		Pre Ch		S.Mode
	Vol +		Vol +		Sleep
	Vol -		Vol -		Text
					Format
					Dual
					Info
					Ch +
					Ch -
					Up
					Right
					Down
					Left
					Ok
					Menu
					Exit
					AV
					Shift + Format
					Shift + Dual
					Sleep
					Text





Original	Replacement	Original	Replacement
Hold	Pause		
PGUP	Shift + Up		
PGDW	Shift + Down		
Index	Shift + Info		
Size	Eject		
Reveal	Media		
Subpage	Subt		
Red	Red		
Green	Green		
Yellow	Yellow		
Cyan	Blue		

