



Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Tv/AV		AV / Input / RDS		Zoom		Zoom / Size
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK/Select		OK
	5		5		Right		Right
	6		6		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		Red / Picture		Red / Netflix / Search
	Red / Picture		Shift + Guide / EPG / -/--		Red / Picture		Picture / Format
	Green / Sound		0		Green / Sound		Green / APP / Repeat
	Green / Sound		Back / Return		Green / Sound		Sound / Title
	Yellow / Sleep		Vol+		Yellow / Sleep		Yellow / YouTube / Repeat
	Yellow / Sleep		Smart / List		Yellow / Sleep		Sleep / Timer
	Blue / Call		CH+ / Page+		Blue / Call		Blue / Prime Video / Random



