 
 
 
 
 
 
 

 



 

 

 



 

 

 
 
 
 
 
 




 
 

 
 











 



 

 






 
 



 

 
 





 
 

 
 
 


 
 




 
 




| Original | Replacement | Original | Replacement |
|---|-------------|---|-------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | Tuner |  | Red |
|  | DVD |  | Blue |
|  | USB |  | Green |
|  | AUX |  | Yellow |
|  | P-EQ |  | AV |
|  | DIM |  | 3D |
|  | Loudness |  | Ch + |
|  | S-Bass |  | Ch - |
|  | Title |  | Text |
|  | Subtitle |  | Subt |
|  | Zoom |  | Eject |
|  | Audio |  | Dual |
|  | Setup |  | Options |
|  | Menu |  | Menu |
|  | Clock |  | Shift + AV |
|  | Sleep/Timer |  | Sleep |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | + |  | Vol + |
|  | - |  | Vol - |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >> |  | >> |
|  | << |  | << |
|  | << |  | << |
|  | Stop |  | Stop |
|  | >> |  | >> |
|  | Mode |  | Info |
|  | OSD/RDS |  | TV/R |





| Original | | Replacement | | Original | Replacement |
|---|---------|---|---------------|----------|-------------|
|  | Program |  +  | Shift + Sleep | | |
|  | 1 |  | 1 | | |
|  | 2 |  | 2 | | |
|  | 3 |  | 3 | | |
|  | 4 |  | 4 | | |
|  | 5 |  | 5 | | |
|  | 6 |  | 6 | | |
|  | 7 |  | 7 | | |
|  | 8 |  | 8 | | |
|  | 9 |  | 9 | | |
|  | 0 |  | 0 | | |
|  | 10+ |  | Guide | | |
|  | Goto |  | Pre Ch | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

