






 


 

 

 



 


 






 



 



 

















 



 









 



Original	Replacement
 Power	 Power
 DTV/ATV	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Aspect	 Zoom / Size

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 V+	 Vol+
 V-	 Vol-
 Mute	 Mute / Dimmer
 MTS	 Eject / Surround
 Timer	 Sleep / Timer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Text / Goto
	 Subtitle / EQ
	 TV/Radio /
	 Smart / List
	 Fav / Marker / PC
	 Guide / EPG / -/--
	 Rec / Rec Mode

Original	Replacement
	 D.Menu / Top
	 Setup / OPT /
	 Audio / Lang I/II

