

 


 







 


 




 
 



 
 

 

 
 
 
 
 


 
 

 
 


 

 
 
 


 




 

 

 



 






Original		Replacement		Original		Replacement	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Mute		Mute
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[ *]/Display		Info		Enter		Ok
	Recall		Back		TXT		Text
	Freeze		Options		Play		Play
	P.Mode		Format		Pause/Time Shift		Pause
	S.Mode		Dual		Stop/EPG		Stop





Original		Replacement		Original		Replacement	
	Record		Rec				
	<</Index		<<				
	>>/Hold		>>				
	I<</Reveal		I<<				
	>>I/Subpage		>>I				
	Mix/Fav List		Pre Ch				
	Size/Subtitle		Subt				
	Cancel/Audio		3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

