





 





























 










	Original	Replacement		Original	Replacement
	Power		Power		Right
	Mute		Mute / Dimmer		OK
	Shuffle		Blue / Prime Video / Random		Esc
	[/]		>>  / Preset+		Snap Shot
	1		1		CH+ / Page+
	2		2		CH- / Page-
	3		3		Vol+
	4		4		Vol-
	5		5		Pause / Step / Freeze
	6		6		Rec / Rec Mode
	7		7		Stop / Hold
	8		8		
	9		9		
	0		0		
	Up		Up		
	Down		Down		
	Left		Left		

