

 


 



 


 
 
 

 


 


 
 
 

 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	<		I<<
	>		>>I
	Menu		Menu
	Guide		Guide
	i		Info
	Exit		Exit
	Up		Up
	OK		Ok
	Down		Down
	Left		Left
	Vol +		Vol +
	Right		Right
	Vol -		Vol -
	P+		Ch +
	P-		Ch -
	Playlist		List
	Portal		Smart
	Filelist		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Original		Replacement		Original		Replacement	
	Rec		Rec				
	Play / Pause		Play				
	Play / Pause		Pause				
	Timer		AV				
	<<		<<				
	>>		>>				
	Stop		Stop				
	Text		Text				
	Audio		Dual				
	Subtitle		Subt				
	TV		TV/R				
	Radio	 + 	Shift + TV/R				
	Help		D. Menu				

