

 




 



 
 
 


 
 





 
 

 





 



 

 


 
 



 

 
 
 

 

 

 
 
 





 

 

 



 
 

 




| Original | | Replacement | | Original | | Replacement | |
|---|-------------------------|---|---------------|---|--------------|---|--------|
|  | Power |  | Power |  | Classical |  | 1 |
|  | Standby |  +  | Shift + Power |  | Live/Club |  | 2 |
|  | Volume+ |  | Vol + |  | Entertain |  | 3 |
|  | Volume- |  | Vol - |  | Movie |  | 4 |
|  | Mute |  | Mute |  | Stereo |  | 5 |
|  | Up / Preset/CH+ |  | Up |  | Enhancer |  | 6 |
|  | Down / Preset/CH- |  | Down |  | Sur.Decode |  | 7 |
|  | Right / |  | Right |  | Parameter |  | 8 |
|  | Left / A/B/C/D/E- |  | Left |  | Multi CH In |  | 9 |
|  | Menu/Set Menu/Srch Mode |  | Menu |  | 0 |  | 0 |
|  | Enter |  | Ok |  | Sleep |  | Pre Ch |
|  | Return/Memory |  | Back |  | <</Info |  | << |
|  | Title/Level/Band |  | TV/R |  | >>/Eon |  | >> |
|  | Display |  | Info |  | I<</Mode PTY |  | I<< |
|  | Audio |  | Dual |  | >>I/PTY Seek |  | >>I |
|  | Pure Direct |  | Smart |  | Scene 1 |  | Red |
|  | Straight |  | Media |  | Scene 2 |  | Green |





| Original | | Replacement | | Original | | Replacement | |
|---|-----------------|---|-------|---|------------------|---|---------------|
|  | Power |  | Power |  | 5 |  | 5 |
|  | Volume+ |  | Vol + |  | 6 |  | 6 |
|  | Volume- |  | Vol - |  | 7 |  | 7 |
|  | Mute |  | Mute |  | 8 |  | 8 |
|  | Band |  | TV/R |  | 9 |  | 9 |
|  | Search Mode |  | AV |  | 0 |  | 0 |
|  | Memory |  | Back |  | ENT |  | Pre Ch |
|  | Preset Up |  | Up |  | Info |  | Red |
|  | Preset Down |  | Down |  | PTY Seek Start |  | Blue |
|  | Right A/B/C/D/E |  | Right |  | Eon |  | Green |
|  | Left A/B/C/D/E |  | Left |  | Mode PTY Seek |  | Yellow |
|  | Enter |  | Ok |  | Power |  | Shift + Power |
|  | Display |  | Info |  | Up V-AUX/Dock |  | Shift + Up |
|  | 1 |  | 1 |  | Down |  | Shift + Down |
|  | 2 |  | 2 |  | Right V-AUX/Dock |  | Shift + Right |
|  | 3 |  | 3 |  | Left |  | Shift + Left |
|  | 4 |  | 4 |  | Enter V-AUX/Dock |  | Shift + Ok |





| Original | Replacement |
|------------------|----------------|
| Audio V-AUX/Dock | Dual |
| Display | Shift + Info |
| Return | Shift + Back |
| Menu | Menu |
| Title V-AUX/Dock | Shift + TV/R |
| 1 V-AUX/Dock | Shift + 1 |
| 2 V-AUX/Dock | Shift + 2 |
| 3 V-AUX/Dock | Shift + 3 |
| 4 V-AUX/Dock | Shift + 4 |
| 5 V-AUX/Dock | Shift + 5 |
| 6 V-AUX/Dock | Shift + 6 |
| 7 V-AUX/Dock | Shift + 7 |
| 8 V-AUX/Dock | Shift + 8 |
| 9 V-AUX/Dock | Shift + 9 |
| 0 V-AUX/Dock | Shift + 0 |
| +10 | Shift + Guide |
| ENT | Shift + Pre Ch |

 

| Original | Replacement |
|----------------|-------------|
| << V-AUX/Dock | << |
| << | << |
| >> | >> |
| >> V-AUX/Dock | >> |
| Rec V-AUX/Dock | Rec |
| Stop | Stop |
| Pause | Pause |
| Play | Play |



V-AUX/Dock



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Standby |  Shift + Power |
|  Tuner |  1 |
|  C |  Yellow |
|  V-AUX/Dock |  3 |
|  DTV/CBL |  4 |
|  CD |  5 |
|  DVD |  7 |
|  DVR |  8 |
|  VCR |  9 |
|  Phono |  Pre Ch |
|  Volume+ |  Vol + |
|  Volume- |  Vol - |
|  Mute |  Mute |
|  <</Info |  << |
|  >>/Eon |  >> |
|  I<</Mode PTY |  I<< |

| Original | Replacement |
|--|---|
|  >>I/PTY Seek |  >>I |



Seek