



































 




Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 Nicam / A2	 Shift + Audio / Lang I/II
 Aspect	 Zoom / Size
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --/	 Shift + Guide / EPG / --/
 0	 0

Original	Replacement
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Freeze	 Shift + Pause / Step /
 TV / Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 EPG	 Guide / EPG / --/
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear


 
 



































Original		Replacement		Original		Replacement	
	Vol+		Vol+		Subtitle		Subtitle / EQ
	Display		Info / Angle		Rec / Auto		Rec / Rec Mode
	CH+		CH+ / Page+		PVR		Smart / List
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	CH-		CH- / Page-				
	Play/Pause / Hold		Play / Slow				
	Play/Pause / Hold		Shift +				
	Play/Pause / Hold		Stop /				
	Play/Pause / Hold		Pause / Step / Freeze				
	<< / Reveal		<< / Tune-				
	>> / Size		>> / Tune+				
	Stop / Index		Stop / Hold				
	I<<		I<< / Preset-				
	>>I / S.Page		>>I / Preset+				
	TTX		Text / Goto				
	T.Shift		Setup / OPT /				
	Audio		Audio / Lang I/II				





Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 Nicam / A2	 Shift + Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --/	 Shift + Guide / EPG / --/
 0	 0

Original	Replacement
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Freeze	 Shift + Pause / Step /
 TV / Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 EPG	 Guide / EPG / --/
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear





Original		Replacement		Original		Replacement	
	Vol+		Vol+		Subtitle		Subtitle / EQ
	Display / i		Display / Media		Rec / Auto		Rec / Rec Mode
	CH+		CH+ / Page+		PVR		Smart / List
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	CH-		CH- / Page-				
	Play/Pause / Hold		Play / Slow				
	Play/Pause / Hold		Shift + Stop /				
	Play/Pause / Hold		Pause / Step / Freeze				
	<< / Reveal		<< / Tune-				
	>> / Size		>> / Tune+				
	Stop / Index		Stop / Hold				
	I<<		I<< / Preset-				
	>>I / S.Page		>>I / Preset+				
	TTX		Text / Goto				
	T.Shift		D.Menu / Top				
	Audio		Audio / Lang I/II				

