 


 



 
 
 






 


 
 




 

 



 









 



 











 









 

 

 






 

 


 

 
 

 



 

 

 
 

 

 
 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Play/Pause	 Pause	 -/--	 Shift + Guide
 Mute	 Mute	 Jump	 Smart
 Source	 AV	 Menu	 Menu
 P.Mode	 Shift + Format	 Info	 Info
 S.Mode	 Shift + Dual	 Sleep	 Sleep
 I/II/Audio	 Dual	 Exit	 Exit
 P.Size	 Format	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red/D.Setup	 Red










 




 


 











 





 

 

 

 
 
 











 


 



 
 

 

 




Original		Replacement		Original		Replacement	
	Green/Repeat		Green		Subtitle		Subt
	Yellow/Zoom		Yellow		Guide		Guide
	Blue/Goto		Blue				
	[≡i]/FAV.CH		Pre Ch				
	[≡?]/Freeze	 + 	Shift + Pause				
	[≡♦]/USB/SD		Media				
	[≡+]/Tv/Radio		TV/R				
	Rec		Rec				
	Stop		Stop				
	Open/Close		Eject				
	Play/Pause		Play				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	DVD Menu		D. Menu				
	Text		Text				



 


 

 

 

 
 



 
 
 







 




Original	Replacement	Original	Replacement
 Power	 Power	 S. Mode	 Shift + Dual
 Mute	 Mute	 Source	 AV
 1	 1	 CH +	 Ch +
 2	 2	 CH -	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 CH. Edit	 Smart
 9	 9	 Menu	 Menu
 0	 0	 Aspect	 Format
 -/--	 Shift + Guide	 Sleep	 Sleep
 Repeat	 Text	 Rec	 Rec
 Vol +	 Vol +	 Rec Menu	 Shift + Rec
 Vol -	 Vol -	 Red	 Red
 Pic. Mode	 Options	 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 CH. Group	 Media		
 TV / Radio	 TV/R		
 I/II Audio	 Dual		
 Subtitle	 Subt		
 EPG	 Guide		
 Info	 Info		
 Play/Pause / Size	 Play		
 Stop / Reveal	 Stop		
 I<< / Text (Page)	 I<<		
 >>I / Index (Page +)	 >>I		
 << / Subpage (FAV -)	 <<		
 >> / Hold(Fav +)	 >>		
 Play/Pause / Size	 Pause		

