




 








 

 





 







 
 


Original	Replacement
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide
	0
	Recall
	Google Play
	YouTube
	Netflix
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Fav / Marker / PC
	Display / Media
	Shift + Yellow / YouTube /
	Shift + Red / Netflix / Search

Original	Replacement
	prime video
	Home
	Up
	Menu
	Left
	OK
	Right
	Back
	Down
	Exit
	Vol+
	Smart/Colours
	CH+
	Vol-
	CH-
	[i+]
	*
	Shift + Blue / Prime
	Shift + Menu /
	Menu / Home
	Menu / Home
	Back / Return
	Exit / Cancel / Clear
	Smart / List
	CH+ / Page+
	Vol-
	CH- / Page-
	Info / Angle
	Setup / OPT /





Original	Replacement
 Mute	 Mute / Dimmer
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 Text	 Text / Goto
 Aspect	 Picture / Format
 Subtitles	 Subtitle / EQ
 Lang	 Audio / Lang I/II
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

