

 

 
 
 

 

 


 
 

 

 
 

 





 


 







	Original	Rechange
	Power	 Power
	Source	 SRC
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	TTX/MIX	 TEXT
	PRE-CH	 P/C / FAV
	Vol+	 VOL +
	Vol-	 VOL -
	Mute	 MUTE

	Original	Rechange
	P+	 CH +
	P-	 CH -
	CH List	 TV/R
	Content	 Shift + VOD
	Menu	 MENU
	Guide	 -/-- / EPG
	Tools	 OPT+
	Info	 INFO
	Return	 BACK
	Exit	 EXIT
	Up	 UP
	Down	 DOWN
	Right	 RIGHT
	Left	 LEFT
	Enter	 OK
	Red	 Red (A)
	Green	 Green (B)



